


Cursor Trace2: 1.461MHz 6.03

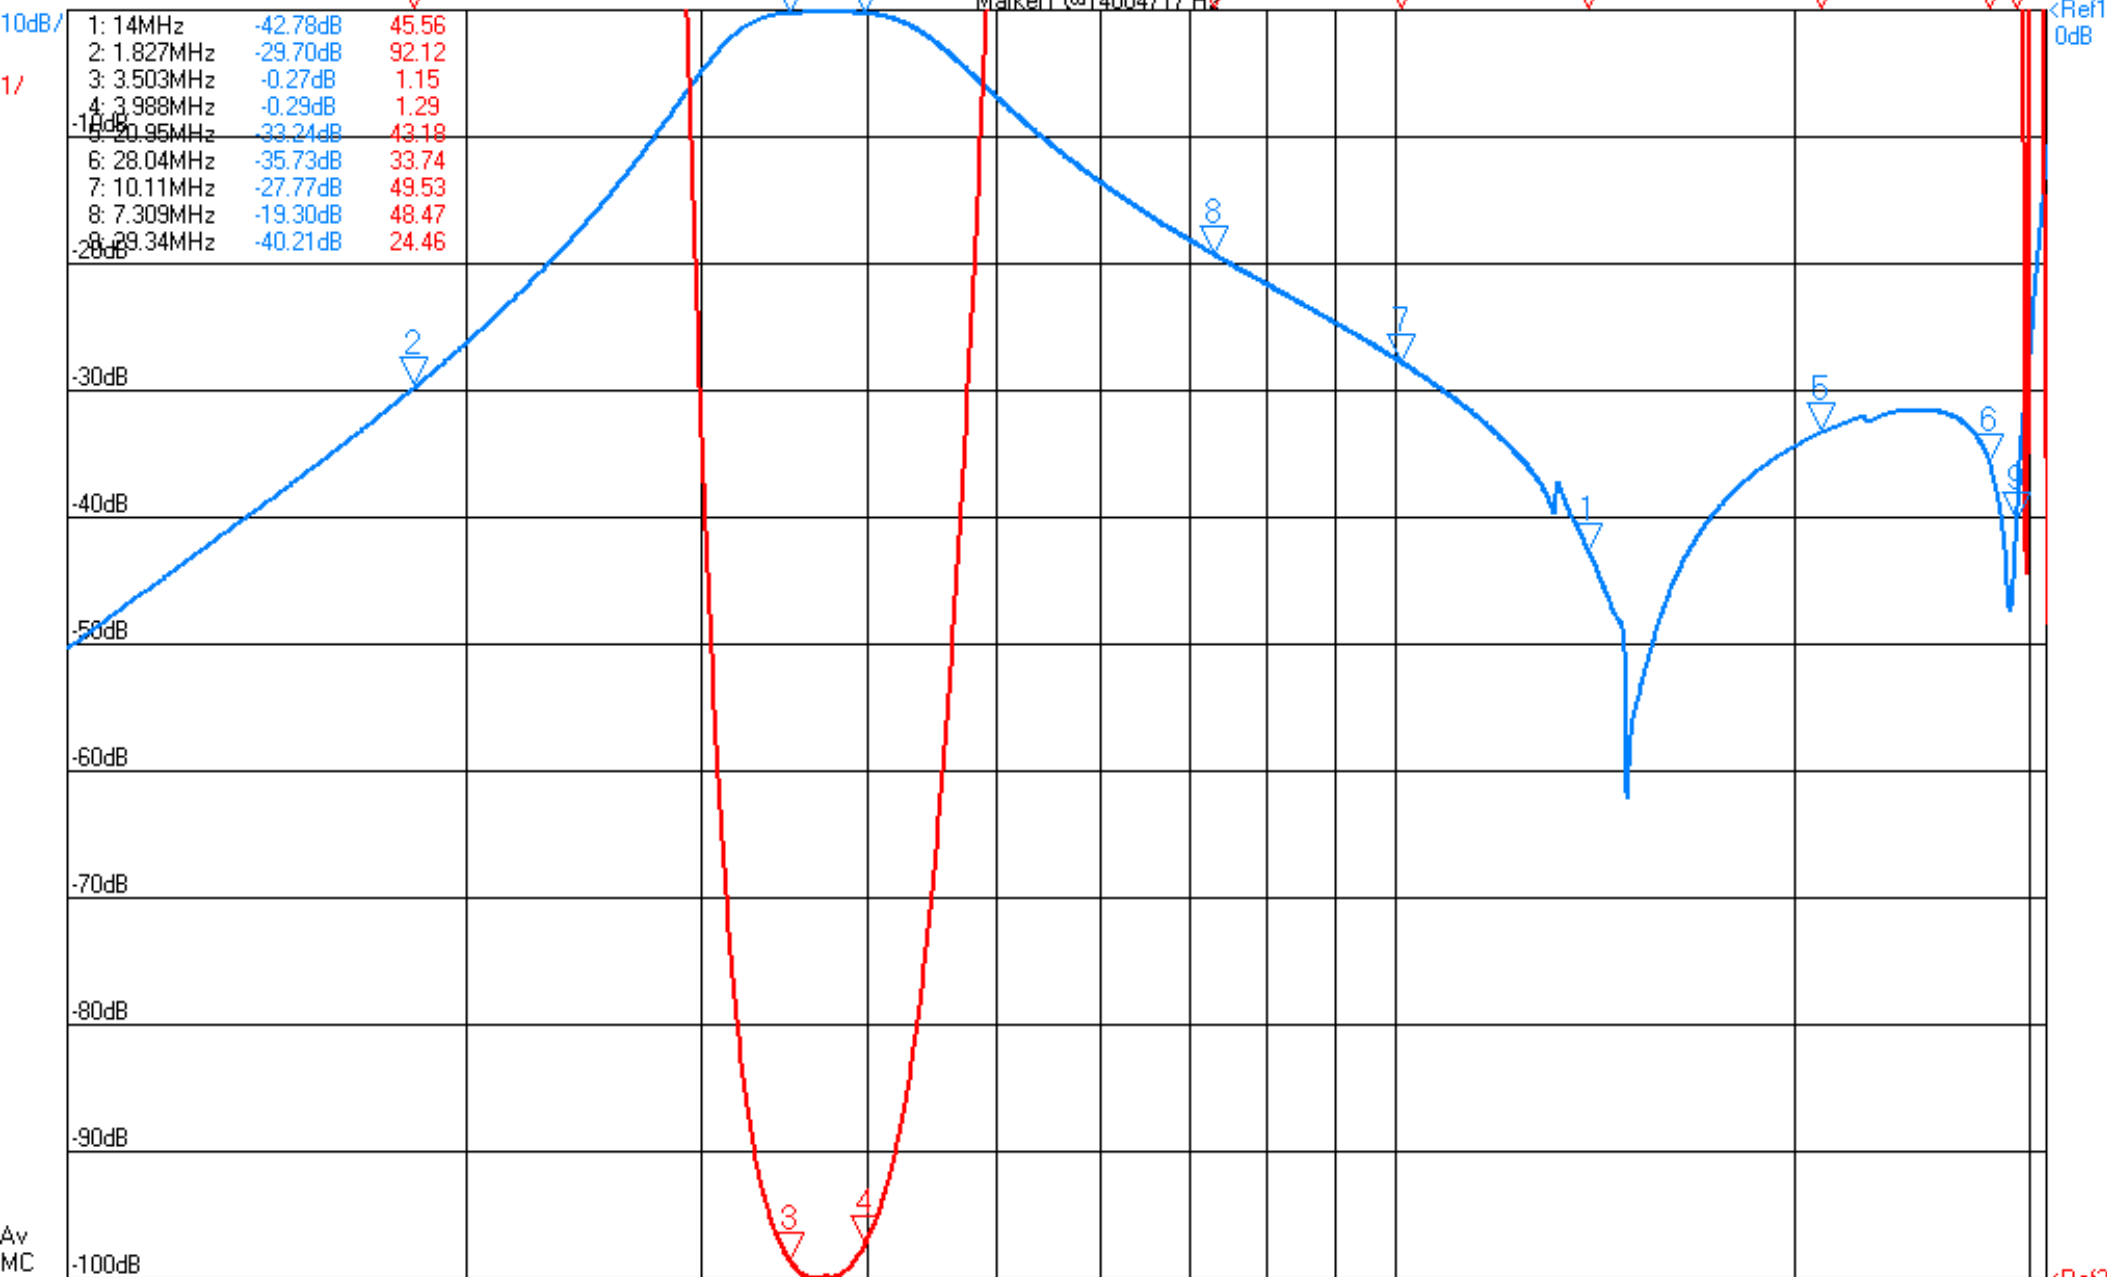

Start = 1 MHz Log Frequency Sweep Stop = 31 MHz

=> TX.Att. = 0 dB  
 S21 dB S11 dB  
 S11 VSWR S11 |Z|